

 
**** The lock must be in the unlocked position during *any* programming changes.**

Detect Left / Right Hand Door Installation




Remark: Please run the door-handing identifying process before function set up when first time installation or default setting restore. It should remain unlocked while programming.

Add New User Code (UC)



Remark: Up to 6 sets of User Codes can be saved. User Code should be 4-10 digits in length.

 Delete an Existing User Code (UC)



Delete All User Codes (UC) At Once



Remark: Auto-locking and Keypad functions will be invalid when User Codes are deleted. The lock can only be operated by key during this time.

Change Programming Code (PC)



Toggle Autolock On / Off



Remark: The preset delay time is 30 seconds. You can change the time by following instructions. Repeat the steps to cancel the Auto-locking function.

**** The lock must be in the unlocked position during *any* programming changes.**

Set Autolock Time Delay



Remark: 10-99 seconds delay-time available

Toggle Mute On / Off



Remark: Repeat same steps to turn beeper On / Off. LED illumination is still functioning when it is in mute; however, there will be no warning alarm.

Enable / Disable All User Codes (UC)



Remark: Auto-locking and Keypad function will be invalid when User Codes are disabled. The lock can only be operated by key during this time. Repeat the steps to enable the User Codes again.

Create a Disposable User Code (UC)



Remark: Disposable code will no longer be valid once it has been used.

Restore All Preset Lock Settings



Remark: Under the inside cover, directly below the batteries, press the “R” button for over 5 seconds and the programming will be complete after you hear 3 long beeps. After restoring, you need to run the door handing identifying process before other function settings.

****The Programming Code (PC) cannot be used as the User Code (UC) / Combination**